



1. Run Codesys and click 'Tools - Update Raspberry Pi'.

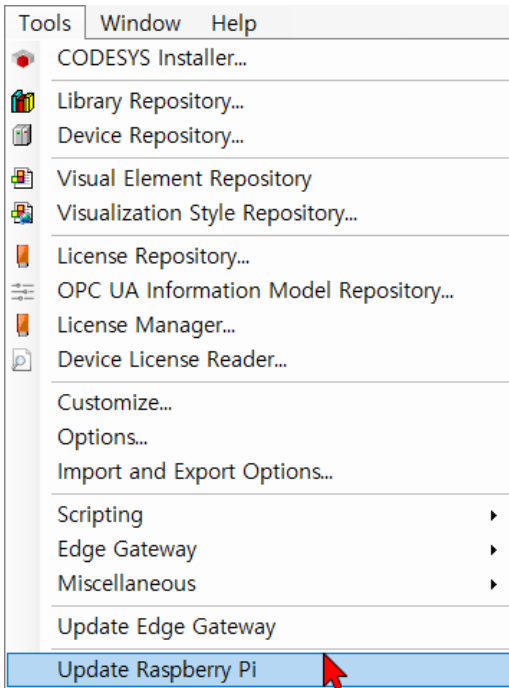

2. Enter the information of Login credentials and Select target.  
(The Raspberry Pi and PC to be connected must have the same IP band.)

(default)

- Username: crevis / Password: user
- IPAddress : 192.168.100.72

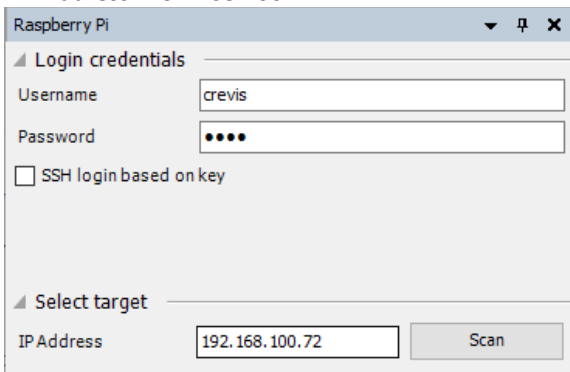

3. Select the version of the installed CODESYS Runtime Package and click 'Remove'.

